


Dept. : Sales	iButton Reader Installation Guide	Date : 2010/7/22
Type : ML	ORION_ML_V10101_990722	Edit by : Kelvin

iButton Reader Installation Guide:


The iButton Reader consists of the following components:

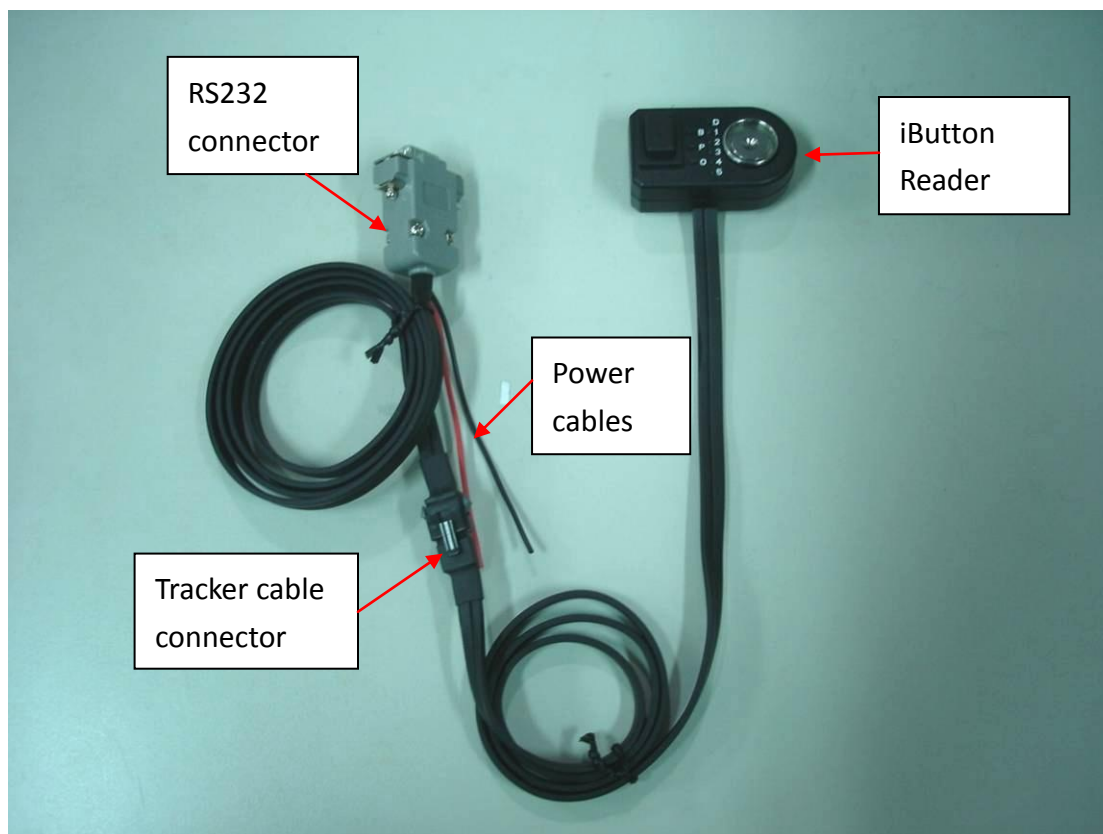

Installation steps:

Step 1:

- Separate the tracker cable connector of the iButton Reader with the RS232 and power cables.

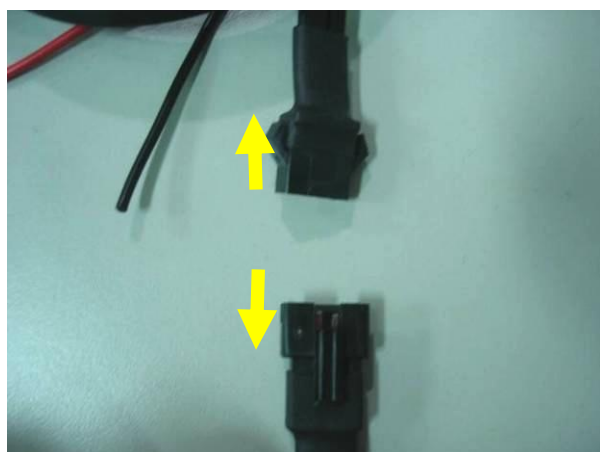

Step2:

- Examine the dashboard area of installation, place the iButton Reader on the dashboard as desired, a panel cut of 16x10mm is necessary for the tracker cable connector to go through in order to hide the cables behind the dashboard.



- The cable connected to the iButton Reader may be bent freely to suit the position of the iButton Reader.




- If the dashboard is not suitable to make panel cuts, then the cable may be bent around to the corners instead.



Step3:

- Once the iButton Reader is positioned securely, connect the tracker cable back together behind the dashboard.

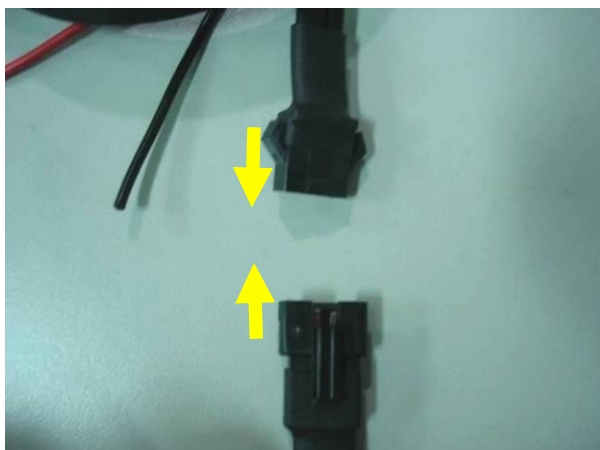

- RS232 connector end of the tracker cable should be connected to the available tracking device.



- Power cable leads on the tracker cable are connected to a 5V DC input.
(Note: this is optional for trackers that do not support power supply through the RS232 pin)

