



NOTES FOR SPEEDTRAC INSTALLATION

1. The Power supply input (RED) must be connected to a permanent power supply
On always i.e. whether the ignition is on or off.
2. The Ignition Detect wire (BROWN) is linked to the ignition and will only be powered
When the ignition is on.
3. The BLACK wire is connected to Ground/Earth.
4. The iButton RED/BLACK wires are NOT used and the iButton is powered via the RS232
Port.
5. Installation and operating instructions for the iButton may be found at
<http://www.gofinder.net/downloads> (Gofinder Speedtrac)
6. To programme ID Keys and Driver names select Utilities>Driver ID Management
On your web page.

Should you have any queries please contact GOFINDER SUPPORT

support@gofinder.net or 07 4615 5450