



New Track in a Box – Quick Guide

Package Contents

1. New Track In A Box Hardware x 1 (with Li-ion backup battery)
2. GSM antenna x 1 (AT4000S, Quad band 850/900/1800/1900MHz)
3. GPS antenna x 1 (AT1575P)
4. 8pin installation cable (CB0810B)
5. SIM card seal x 1, Reset tact switch seal x 1
6. Twin side adhesive x 2

Device Specifics

Front panel:




1. GPS antenna jack (Right side of the panel)
2. GSM antenna jack (Left side of the panel)
3. 8pin cable connector



Rear panel:

1. RESET (Left tact switch button): System reboot
2. SIM card holder
3. LED indicators




PWR 	OFF: Power OFF Flash: Power ON
GSM 	OFF: GSM module OFF or Error Flash: No SIM Card, Searching networks (0.25sec ON 0.5sec OFF) Flash: GSM registered (0.5sec ON 0.5sec OFF) Flash: GPRS connecting (0.25sec ON 0.25sec OFF) ON: Socket session online (connect to Gateway Server)
GPS 	OFF: GPS module OFF or Error Flash: Searching GPS signal ON: GPS fixed

Notes for New Track In A Box Installation

1. The Power Supply Input (RED) must be connected to a permanent power supply – On always i.e. whether the ignition is on or off
2. The Ignition Detect Wire (BROWN) is linked to the ignition and will only be powered when the ignition is on
3. The BLACK wire is connected to the ground/earth
4. Tape all other wires out of the way if they are loose



Wiring Diagram

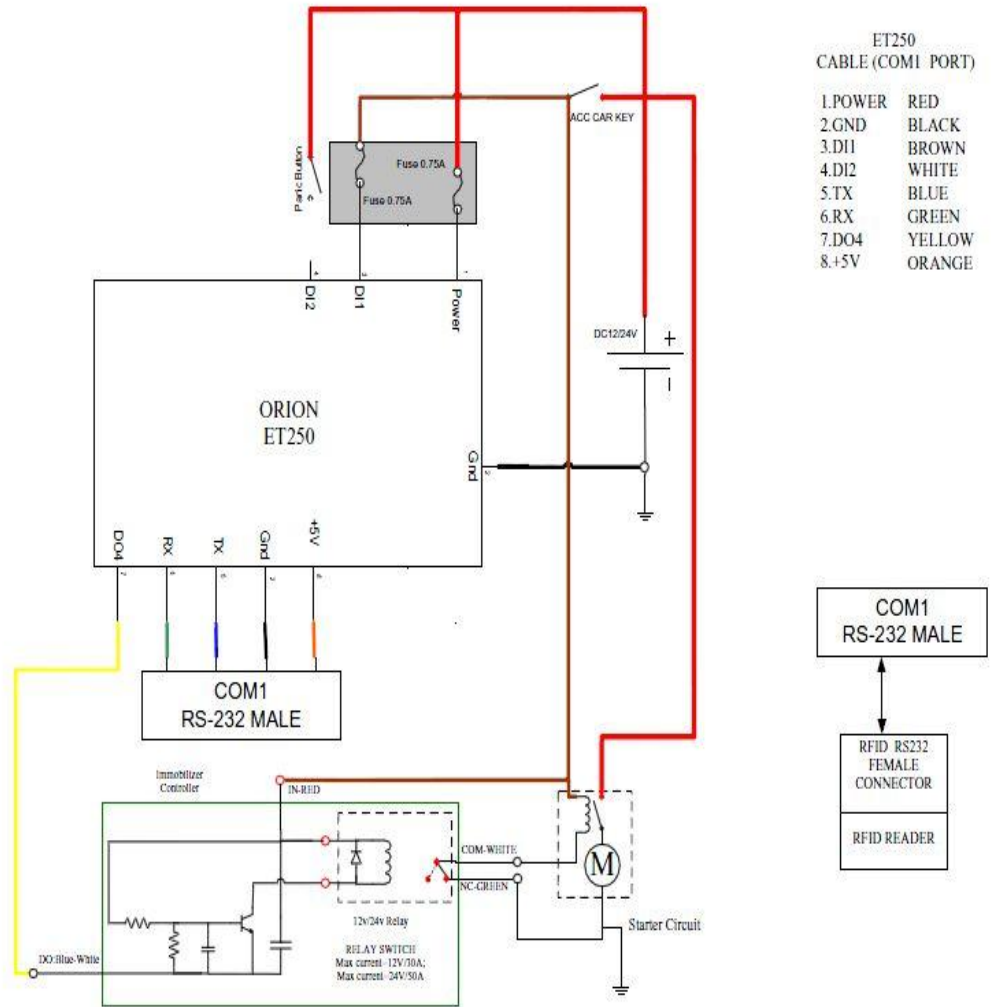

Should you have any queries, please contact GOFINDER SUPPORT

support@gofinder.net or call 07 4615 5450